



Cool Products for Cool Pets!

Pet Net Barrier Model-B

Owners Guide

Pet Net Barrier for Car's, Truck's & SUV's

Item#: PN-141B

Parts List – assembly and installation required

1. Pet Net mesh body
2. Fiberglass rod (for top curve)
3. (2) ball bungees (for headrests)
4. (4) hook bungees for corners
5. (2) suction cup hooks, **NEW** →



(optional)



Installation guidelines

1. We suggest viewing the Installation video
 - a. Travelin-k9.com - or - YouTube
2. Assemble **fiberglass rod** - thread through all the sleeves and insert rod end into “pocket”. Anchor this end and then flex the other rod end until it will slide into opposite pocket.
3. **Headrests:** Climb into the back seat of your vehicle and hold the net in place temporarily – determine which grommet will work best for your headrests, then insert the “looped” end of both **ball bungees** through those 2 grommets. (The Ball will keep the loop from pulling through)
 - a. Grommets not lining up? Wrap the bungee (like a luggage tag) around exposed rod
 - b. Exposed rod sections should face forward!
 - c. Now wrap (stretch) bungee cord around each headrest (loosely holds NET for next step).
4. **Secure (4) Corners** – adjust tension
 - a. **OVERHEAD HANDLES:** Normally the best method to secure TOP corners.
 - i. Thread bungee through the handle, one hook in a corner grommet; second hook wraps onto itself ... should be loose. Move to the other side and repeat. Increase tension if necessary by putting both hooks in the grommet.
 - ii. No Handles? Try the suction cup hooks. (**USE CAUTION: when opening door**).
 - b. **SIDE (Pillar) HANDLES:** Found on many SUV's & Mini-Vans (similar to overhead).
 - i. Need more tension? Attach one hook to the vertical metal bar of your headrest.
 - c. **BOTTOM** - can be secured to the seat belt housing, bottom seat frame, etc.

Limited 1-year warranty

Travelin'K9, Inc. warrants to the original consumer, that this product will be free of defects for a period of one year from the date of purchase. Travelin'K9's liability here under is limited to the replacement of the product only. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering or other causes not arising from defects in material or workmanship.

To exercise your warranty: If during the warranty period, your product malfunctions, return it to the place of purchase with your original receipt. If this cannot be done, return the product, postage prepaid, to Travelin'K9, Inc., with dated proof of purchase or original receipt. All returns to Travelin'K9 require an RMA which can be obtained by going to www.travelin-k9.com and completing the Return Request Form which provides us the details of your return request. A response email will be returned to you with the RMA and return instructions to the email address you provide.

Travelin'K9 Customer Service Help Center


610 N. 5th Street, Pekin, IL 61554 • info@travelin-k9.com • (309) 550-7248

PARTS DIAGRAM



Headrest Bungee Ball straps (2)

1. Thread the end loop through an appropriate eyelet -- OR ...
2. Wrap around exposed rod – and stretch loop around headrest. Ball will keep bungee from pulling through eyelet.

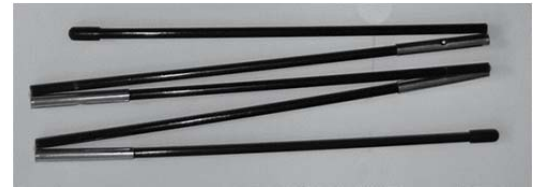


Fiberglass Rod (1)

1. Assemble rod sections, and then start pulling each “sleeve” section down over the rod until the rod end is in the pocket.
2. Secure rod end - then flex rod until you can insert opposite end in opposite pocket.

See installation video for tips!

(3) Ball Bungee attachment points

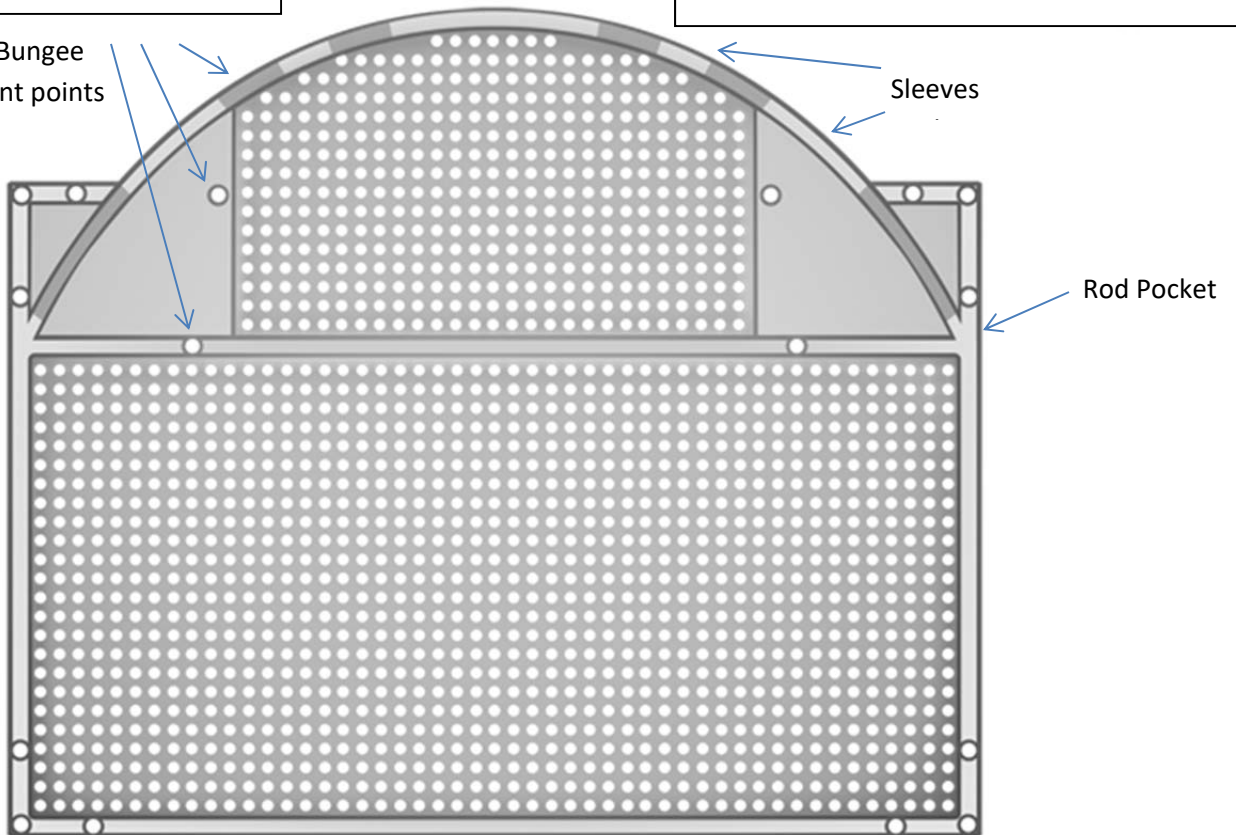

Hook Bungees (4) ... Optional Suction Cup Hooks (2)



1. **Top Corners** - work best when secured to the overhead handle (Side handle for SUV's and minivans).
 - a. No overhead handle? Try using suction hooks – please use caution when opening your door with bungees attached.
2. **Bottom Corners** - works best wrapped around seatbelt housing near the floor. Can also be wrapped (or hooked) under the seat (frame).